

Chafing Dish Induction Plus




Instruction: brake replacement Anleitung: Tausch der Bremse

Using the example of a GN 2/3 Chafing Dish.
Am Beispiel eines GN 2/3 Chafing Dishes.



Step 1: Unscrew the cap nuts and remove the brake.
Schritt 1: Hutmuttern abschrauben und die Bremse abziehen

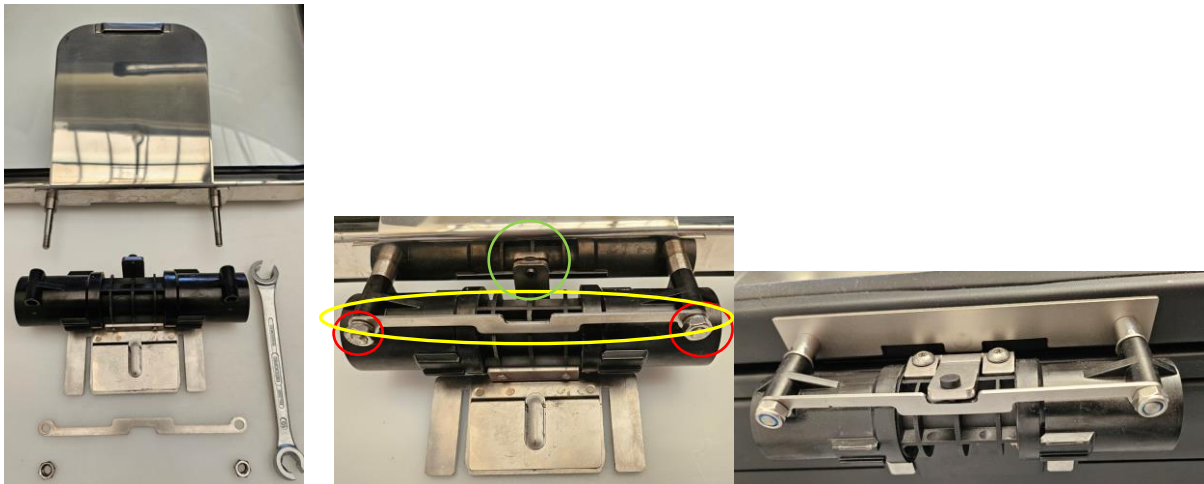

Step 2: Put on the new brake. Use the new cap nuts (M6/SW10) to tighten the brake.
Make sure that the spacer plate is installed the right way round.
Tip: It is best to attach the brake at a 30° angle to the plate. This means that the stop with the buffer is correctly positioned.
Schritt 2: Neue Bremse aufstecken. Die Bremse mit den neuen Hutmuttern (M6/SW10) befestigen.
Achte darauf, dass das Abstandsblech richtig herum eingebaut ist.
Tip: Die Bremse am besten in einem 30° Winkel zur Platte aufstecken. Dadurch sitzt der Anschlag mit Puffer richtig.

